


## **Wall Mount Installation Guide – STANDOFF – METAL PIN MOUNTS**

### **INSTALLATION INSTRUCTIONS - GYPROCK WALL**

1. Please refer to Terms & Conditions on our website [www.printsonglass.com.au](http://www.printsonglass.com.au) particularly item 6.
2. Unwrap your print in an appropriate location. Preferably on a soft floor like carpet or a rug.
3. Use the supplied cardboard packaging to create a template.
4. Lay the glass print down on the supplied cardboard packaging. Mark around the perimeter of the glass and the center of the 13mm diameter holes used to mount your wall print.
5. Punch a small hole through the cardboard where each fixing will be positioned and cut out the template.
6. The metal standoffs have an 8mm diameter thread, and the glass has a 13mm diameter hole. This provides tolerance to adjust your print and get it perfectly level.
7. Hold your template up to the wall where you would like the print positioned - use a level to ensure the top two holes are level.
8. Using a pencil, carefully mark the holes in the wall.
9. Using a 6mm drill bit, drill holes through the gyprock wall.
10. Using a phillips head screw driver insert the supplied wall mates into the gyprock wall.
11. Unscrew the head from the pin mount.
12. Use the supplied screws to fix the pin mount base to the wall by inserting the screw into the wallmate.
13. Pick up the glass print and insert the pin mount head through one of the top holes in the glass with one PVC washer on each side of the glass and screw it into the matching wall mount.
14. Level the print and insert the second pin mount head.
15. Continue with the rest of the pin mount heads.
16. Adjust the wall print until you are satisfied that it is level, and tighten up the pin mount heads.
17. Stand back and enjoy!

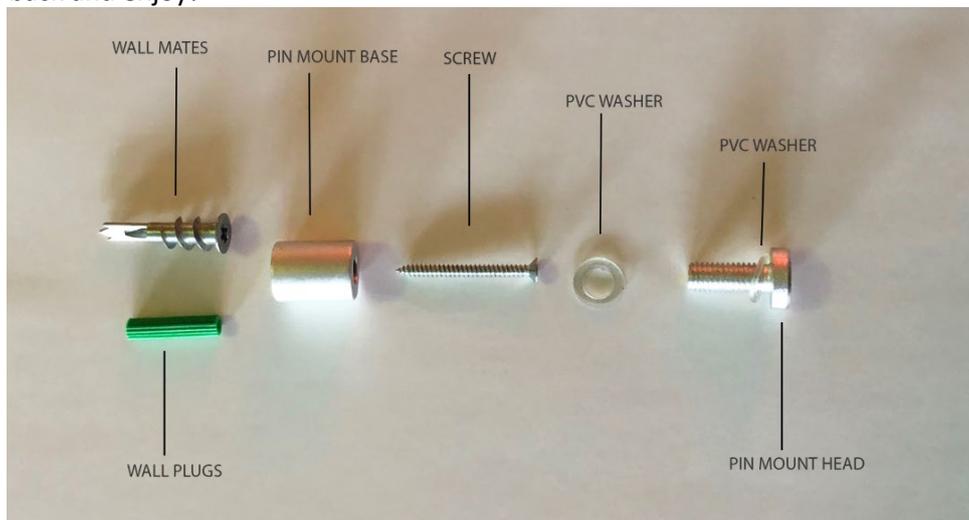

## INSTALLATION INSTRUCTIONS - **BRICK OR RENDERED WALL**

1. Please refer to Terms & Conditions on our website [www.printsonglass.com.au](http://www.printsonglass.com.au) particularly item 6.
2. Unwrap your print in an appropriate location. Preferably on a soft floor like carpet or a rug.
3. Use the supplied cardboard packaging to create a template.
4. Lay the glass print down on the supplied cardboard packaging. Mark around the perimeter of the glass and the center of the 13mm diameter holes used to mount your wall print.
5. Punch a small hole through the cardboard where each fixing will be positioned and cut out the template.
6. The metal standoffs have an 8mm diameter thread, and the glass has a 13mm diameter hole. This provides tolerance to adjust your print and get it perfectly level.
7. Hold your template up to the wall where you would like the print positioned - use a level to ensure the top two holes are level.
8. Using a pencil, carefully mark the holes in the wall.
9. Using a 6mm drill bit, drill holes into the masonry wall.
10. Install the supplied wall plug into the holes you have drilled with a hammer.
11. Unscrew the head from the pin mount.
12. Use the supplied screws to fix the pin mount base to the wall by inserting the screw into the wall plug.
13. Pick up the glass print and insert the pin mount head through one of the top holes in the glass with one PVC washer on each side of the glass and screw it into the matching wall mount.
14. Level the print and insert the second pin mount head.
15. Continue with the rest of the pin mount heads.
16. Adjust the wall print until you are satisfied that it is level, and tighten up the pin mount heads.
17. Stand back and enjoy!

